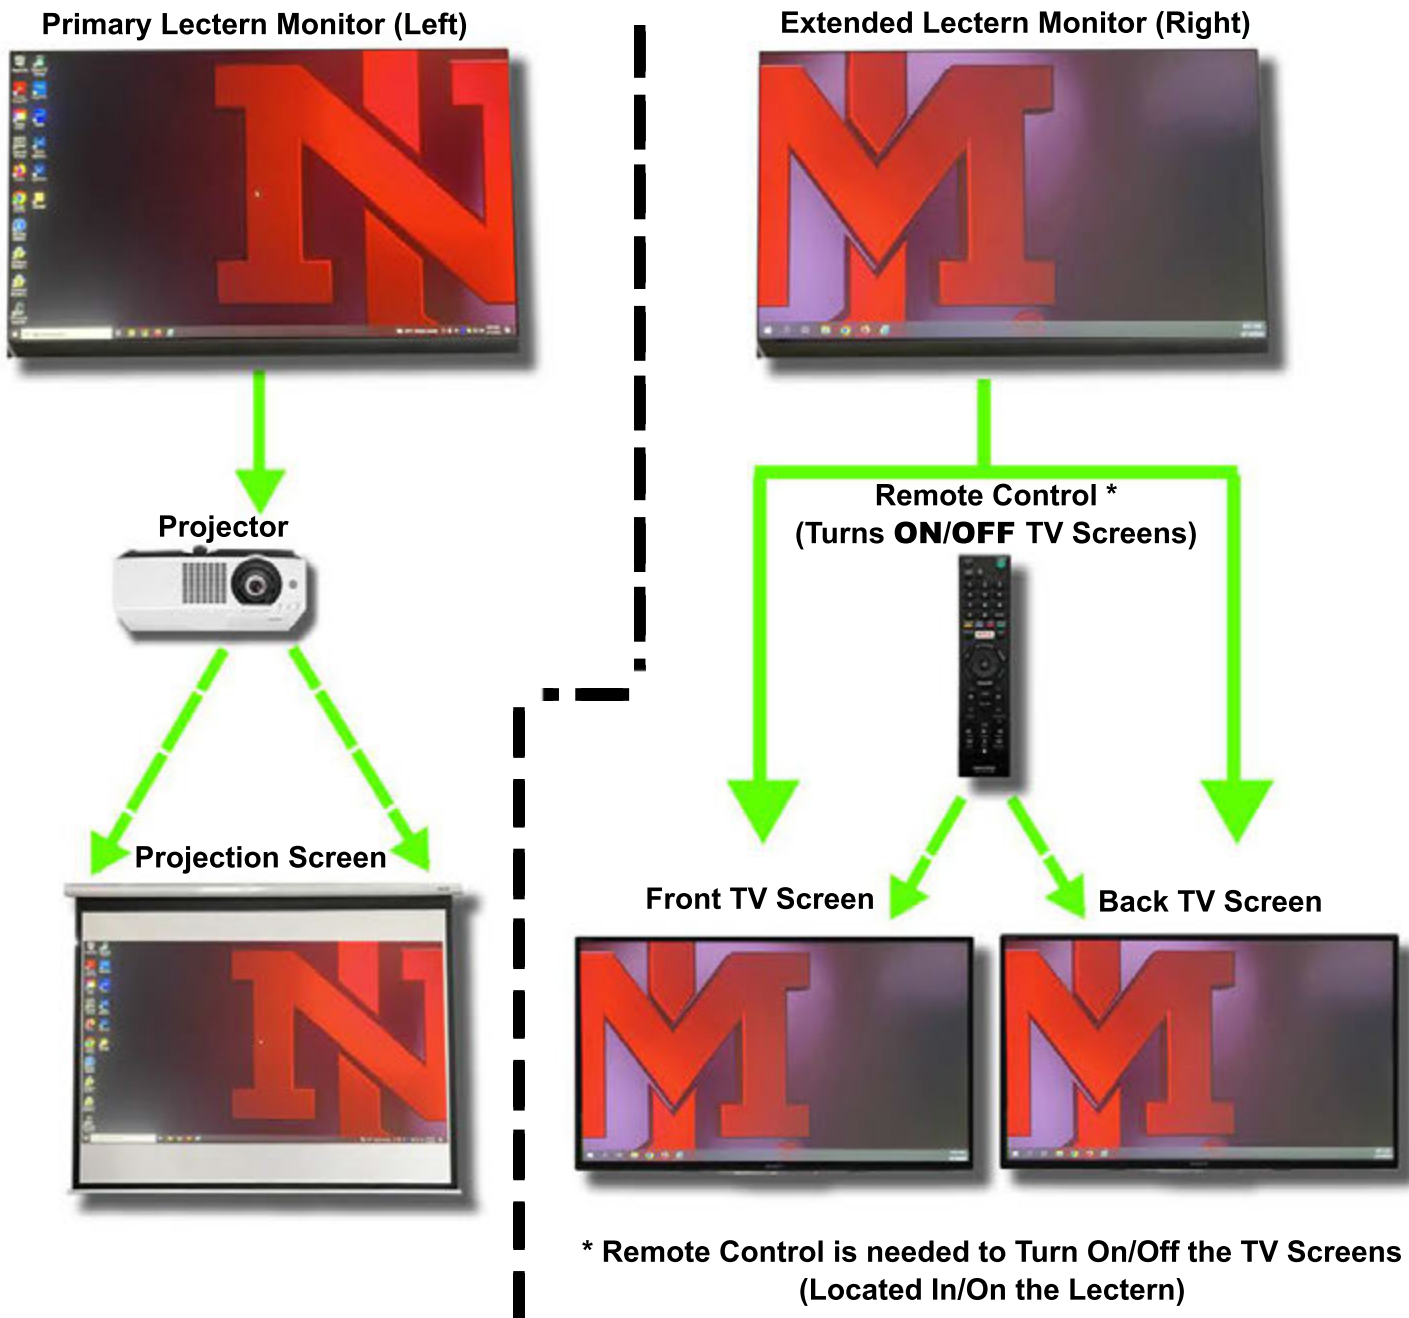The Hyflex Classroom is designed to create the best possible real-time interaction between remote and in-room participants. This is made possible with multiple cameras, multiple displays, high quality document camera, and enchanced audio capture with ceiling mics.

Hyflex Classroom Displays

Primary Lectern Monitor (Left)

Extended Lectern Monitor (Right)

Projector

Remote Control *
(Turns ON/OFF TV Screens)

Projection Screen

Front TV Screen

Back TV Screen

* Remote Control is needed to Turn On/Off the TV Screens
(Located In/On the Lectern)

Hyflex Classroom Camera Controls

Double Click the **PTZ Camera Controller** on the Lecturn Desktop to launch the camera control application.
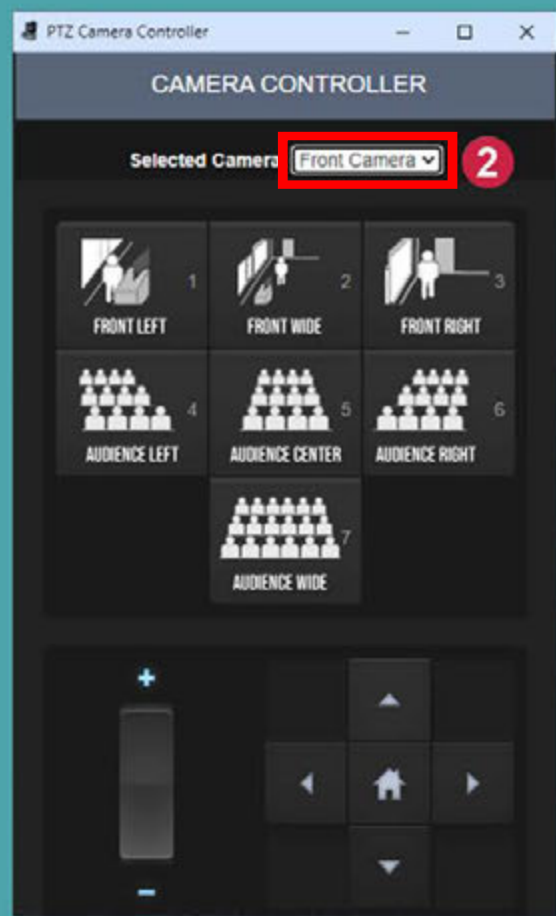

PTZ Camera Controller

From **Selected Camera** drop down menu, select either **Back Camera** or **Front Camera**

1 Back Camera, shows front lectern and whiteboards.

Lectern View

2 Front Camera, shows Audience from varied angles.

Audience View

For further information regarding camera controls, see Page 2

Visit https://italerts.unm.edu/ to see impacted service alerts.
Or call UNM IT Help Desk at (505) 277-5757 (Opt.2)